


DESCRIPTION AND OPERATION

Instrument Cluster

The instrument cluster consists of the following components:

Instrument Cluster (Without Message Center)

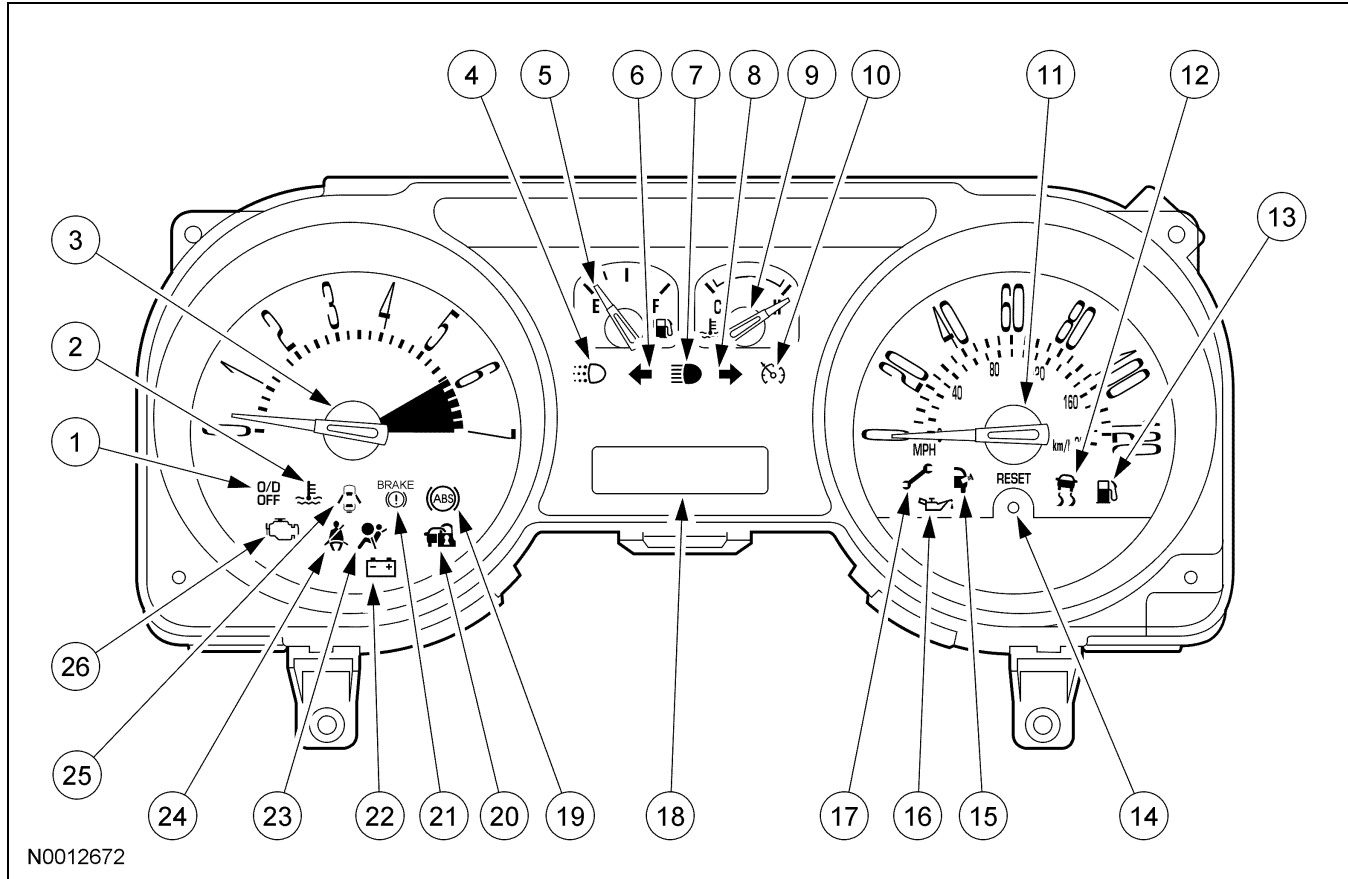

N0012672

Item	Part Number	Description
1	—	O/D OFF indicator
2	—	Failsafe cooling warning indicator
3	—	Tachometer
4	—	Daytime running lamps indicator
5	—	Fuel gauge
6	—	Left turn signal indicator
7	—	High beam indicator
8	—	Right turn signal indicator
9	—	Engine coolant temperature gauge
10	—	Speed control indicator
11	—	Speedometer
12	—	Traction control indicator

(Continued)

Item	Part Number	Description
13	—	Low fuel warning indicator
14	—	Trip odometer reset button
15	—	Check fuel cap warning indicator
16	—	Low oil pressure warning indicator
17	—	Electronic throttle control (ETC) warning indicator
18	—	Electronic display/odometer
19	—	Anti-lock brake system (ABS) warning indicator
20	—	Anti-theft indicator
21	—	BRAKE warning indicator
22	—	Charging system warning indicator
23	—	Air bag warning indicator

(Continued)


DESCRIPTION AND OPERATION (Continued)

Item	Part Number	Description
24	—	Safety belt warning indicator
25	—	Door/Trunk ajar warning indicator

Item	Part Number	Description
26	—	Malfunction indicator lamp (MIL)

(Continued)

Instrument Cluster (With Message Center)

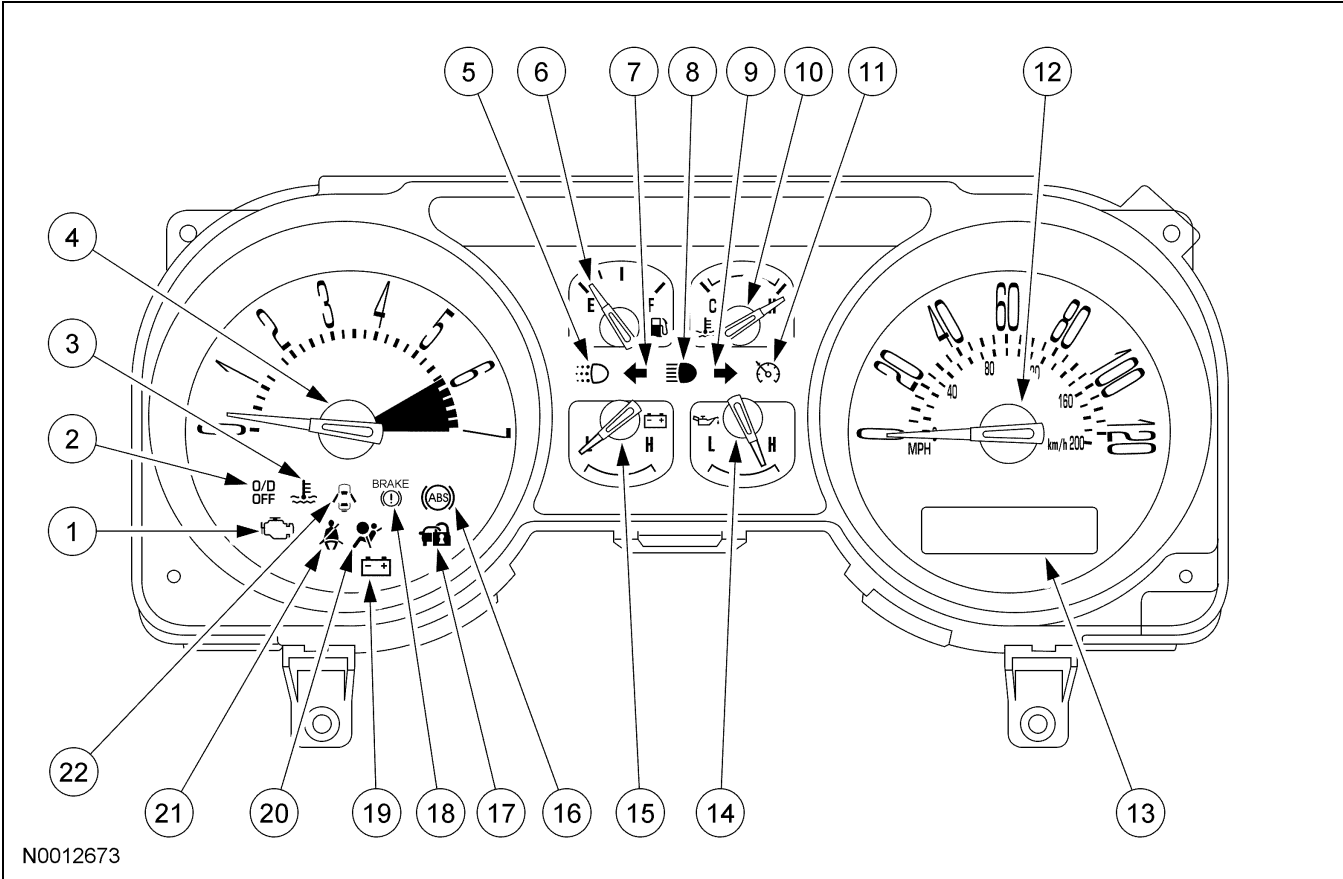

N0012673

Item	Part Number	Description
1	—	Malfunction indicator lamp (MIL)
2	—	O/D OFF indicator
3	—	Failsafe cooling warning indicator
4	—	Tachometer
5	—	Daytime running lamps indicator
6	—	Fuel gauge
7	—	Left turn signal indicator
8	—	High beam indicator
9	—	Right turn signal indicator
10	—	Engine coolant temperature gauge

(Continued)

Item	Part Number	Description
11	—	Speed control indicator
12	—	Speedometer
13	—	Message center
14	—	Oil pressure gauge
15	—	Voltage gauge
16	—	Anti-lock brake system (ABS) warning indicator
17	—	Anti-theft indicator
18	—	BRAKE warning indicator
19	—	Charging system warning indicator
20	—	Air bag warning indicator
21	—	Safety belt warning indicator

(Continued)

DESCRIPTION AND OPERATION (Continued)

Item	Part Number	Description
22	—	Door/Trunk ajar warning indicator
