


REMOVAL AND INSTALLATION

Positive Crankcase Ventilation (PCV) Valve

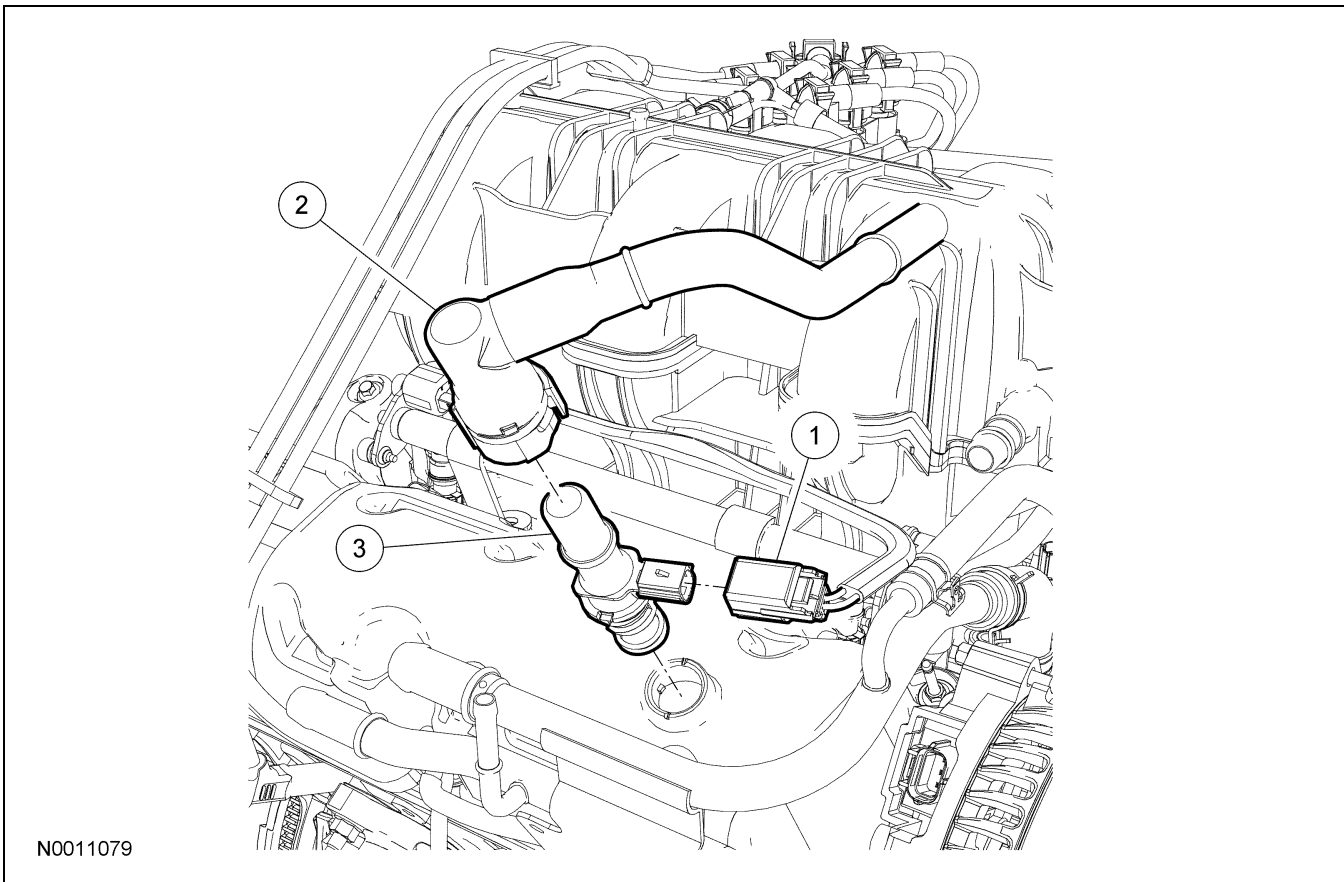

Item	Part Number	Description
1	14A464	Positive crankcase ventilation (PCV) valve electrical connector
2	9E499	PCV valve tube
3	6A666	PCV valve

Removal and Installation

1. Disconnect the battery ground cable. For additional information, refer to Section 414-01.

2. Disconnect the positive crankcase ventilation (PCV) valve tube from the PCV valve.
3. Disconnect the PCV valve electrical connector.
4. **⚠ CAUTION: A new PCV valve must be installed if removed from the cam cover or damage can occur to the locking mechanism on the PCV valve.**

Rotate the PCV valve counterclockwise to remove from the valve cover.

5. To install, reverse the removal procedure.